

# Printer Compatible List

| No. | Company | Printer Model   | Print | Note |
|-----|---------|-----------------|-------|------|
| 1.  | Avision | MF 3200         | OK    |      |
| 2.  | Avision | MF 3230         | OK    |      |
| 3.  | Brother | HL1260          | OK    |      |
| 4.  | Brother | MFC4800         | OK    |      |
| 5.  | Brother | MFC4800J        | OK    |      |
| 6.  | Brother | MFC6800         | OK    |      |
| 7.  | Brother | MFC7220         | OK    |      |
| 8.  | Brother | MFC7420         | OK    |      |
| 9.  | Brother | MFC8840D        | OK    |      |
| 10. | Brother | MFC210C         | OK    |      |
| 11. | Brother | IntelliFax 2820 | OK    |      |
| 12. | CANON   | S520            | OK    |      |
| 13. | CANON   | S200SPX         | OK    |      |
| 14. | CANON   | I450            | OK    |      |
| 15. | CANON   | I550            | OK    |      |
| 16. | CANON   | I850            | OK    |      |
| 17. | CANON   | I950            | OK    |      |
| 18. | CANON   | I255            | OK    |      |
| 19. | CANON   | I355            | OK    |      |
| 20. | CANON   | I455            | OK    |      |
| 21. | CANON   | I475D           | OK    |      |
| 22. | CANON   | I560            | OK    |      |
| 23. | CANON   | I865            | OK    |      |
| 24. | CANON   | I905D           | OK    |      |
| 25. | CANON   | I6100           | OK    |      |
| 26. | CANON   | I9100           | OK    |      |
| 27. | CANON   | I6500           | OK    |      |
| 28. | CANON   | I9950           | OK    |      |
| 29. | CANON   | IX4000          | OK    |      |
| 30. | CANON   | IX5000          | OK    |      |

| No. | Company | Printer Model | Print | Note |
|-----|---------|---------------|-------|------|
| 31. | CANON   | BJ-330        | OK    |      |
| 32. | CANON   | BJC-620       | OK    |      |
| 33. | CANON   | BJC4200       | OK    |      |
| 34. | CANON   | BJC4300       | OK    |      |
| 35. | CANON   | BJC4550       | OK    |      |
| 36. | CANON   | PIXMA ip1000  | OK    |      |
| 37. | CANON   | PIXMA ip2000  | OK    |      |
| 38. | CANON   | PIXMA ip3000  | OK    |      |
| 39. | CANON   | PIXMA ip4000  | OK    |      |
| 40. | CANON   | PIXMA ip5000  | OK    |      |
| 41. | CANON   | PIXMA ip6000  |       |      |
| 42. | CANON   | PIXMA ip8500  |       |      |
| 43. | CANON   | MP-110        |       |      |
| 44. | CANON   | MP-130        |       |      |
| 45. | CANON   | MP730         |       |      |
| 46. | Citizen | GSX230        |       |      |
| 47. | DATAMAX | I-4208        |       |      |
| 48. | DATAMAX | I-4308        |       |      |
| 49. | DOCUJET | 1610F         |       |      |
| 50. | DOCUJET | UA1610        |       |      |
| 51. | EPSON   | CX 1500       |       |      |
| 52. | EPSON   | LQ-100        | OK    |      |
| 53. | EPSON   | LQ-300        | OK    |      |
| 54. | EPSON   | LQ-300+       | OK    |      |
| 55. | EPSON   | LQ-570C       | OK    |      |
| 56. | EPSON   | LQ-1000C      | OK    |      |
| 57. | EPSON   | LQ-1170+      | OK    |      |
| 58. | EPSON   | LQ-1170C+     | OK    |      |
| 59. | EPSON   | LQ-1170C      | OK    |      |
| 60. | EPSON   | LQ-2070C      | OK    |      |
| 61. | EPSON   | LQ-2080C      | OK    |      |

| No. | Company | Printer Model     | Print | Note |
|-----|---------|-------------------|-------|------|
| 62. | EPSON   | LQ-2090           | OK    |      |
| 63. | EPSON   | LQ-2170C          | OK    |      |
| 64. | EPSON   | LQ-2180C          | OK    |      |
| 65. | EPSON   | LQ-3500C          | OK    |      |
| 66. | EPSON   | LQ-670            | OK    |      |
| 67. | EPSON   | LQ-680            | OK    |      |
| 68. | EPSON   | LQ-680C           | OK    |      |
| 69. | EPSON   | STYLUS C20        | OK    |      |
| 70. | EPSON   | STYLUS C40        | OK    |      |
| 71. | EPSON   | STYLUS C41UX      | OK    |      |
| 72. | EPSON   | STYLUS C43UX      |       |      |
| 73. | EPSON   | STYLUS C45        |       |      |
| 74. | EPSON   | STYLUS C60        |       |      |
| 75. | EPSON   | Stylus C63        |       |      |
| 76. | EPSON   | Stylus C83        |       |      |
| 77. | EPSON   | Stylus Color 400  |       |      |
| 78. | EPSON   | Stylus Color 600  |       |      |
| 79. | EPSON   | STYLUS Color 670  |       |      |
| 80. | EPSON   | Stylus Color 1160 |       |      |
| 81. | EPSON   | Stylus Color 1520 |       |      |
| 82. | EPSON   | Stylus Photo 830U |       |      |
| 83. | EPSON   | Stylus Photo 915  | OK    |      |
| 84. | EPSON   | Stylus Photo 1270 | OK    |      |
| 85. | EPSON   | Stylus Photo 1290 | OK    |      |
| 86. | EPSON   | STYLUS PHOTO 2100 | OK    |      |
| 87. | EPSON   | STYLUS PHOTO EX3  | OK    |      |
| 88. | EPSON   | ACULASER C1900    | OK    |      |
| 89. | EPSON   | EPL5800           | OK    |      |
| 90. | EPSON   | EPL6200           | OK    |      |
| 91. | EPSON   | LP2500            | OK    |      |
| 92. | EPSON   | LP8900            | OK    |      |

| No.  | Company | Printer Model  | Print | Note |
|------|---------|----------------|-------|------|
| 93.  | EPSON   | TM T88III      | OK    |      |
| 94.  | FUJITSU | DL-700         | OK    |      |
| 95.  | FUJITSU | DL-900         | OK    |      |
| 96.  | FUJITSU | DL-3400        | OK    |      |
| 97.  | FUJITSU | DL-3800        | OK    |      |
| 98.  | FUJITSU | DL-6400Pro     | OK    |      |
| 99.  | FUJITSU | Jet Wind 500C  | OK    |      |
| 100. | FUJITSU | PP 10          | OK    |      |
| 101. | FUTEK   | F8000          | OK    |      |
| 102. | FUTEK   | F84+           | OK    |      |
| 103. | FUTEK   | F86+           |       |      |
| 104. | HP      | DeskJet400     |       |      |
| 105. | HP      | DeskJet500     |       |      |
| 106. | HP      | DeskJet670C    |       |      |
| 107. | HP      | DeskJet 680C   |       |      |
| 108. | HP      | DeskJet 720C   |       |      |
| 109. | HP      | DeskJet 920C   |       |      |
| 110. | HP      | DeskJet 930C   |       |      |
| 111. | HP      | DeskJet 1125C  |       |      |
| 112. | HP      | DeskJet 1180C  |       |      |
| 113. | HP      | DeskJet 1220C  |       |      |
| 114. | HP      | DeskJet 3535   | OK    |      |
| 115. | HP      | DeskJet 3650   | OK    |      |
| 116. | HP      | DeskJet 5500   | OK    |      |
| 117. | HP      | DeskJet 5550   | OK    |      |
| 118. | HP      | DeskJet 5652   | OK    |      |
| 119. | HP      | DeskJet 810C   | OK    |      |
| 120. | HP      | DeskJet 845C   | OK    |      |
| 121. | HP      | LaserJet 1022  | OK    |      |
| 122. | HP      | LaserJet 1022N | OK    |      |
| 123. | HP      | LaserJet 1100  | OK    |      |

| No.  | Company            | Printer Model   | Print | Note |
|------|--------------------|-----------------|-------|------|
| 124. | <a href="#">HP</a> | LaserJet 1200   | OK    |      |
| 125. | <a href="#">HP</a> | LaserJet 1300   | OK    |      |
| 126. | <a href="#">HP</a> | LaserJet 1320   | OK    |      |
| 127. | <a href="#">HP</a> | LaserJet 1500L  | OK    |      |
| 128. | <a href="#">HP</a> | LaserJet 2200   | OK    |      |
| 129. | <a href="#">HP</a> | LaserJet 2200D  | OK    |      |
| 130. | <a href="#">HP</a> | LaserJet 2300   | OK    |      |
| 131. | <a href="#">HP</a> | LaserJet 2420   | OK    |      |
| 132. | <a href="#">HP</a> | LaserJet 2550L  | OK    |      |
| 133. | <a href="#">HP</a> | LaserJet 3015   | OK    |      |
| 134. | <a href="#">HP</a> | LaserJet 3050   |       |      |
| 135. | <a href="#">HP</a> | LaserJet 3200   |       |      |
| 136. | <a href="#">HP</a> | LaserJet 3330   |       |      |
| 137. | <a href="#">HP</a> | LaserJet 3380   |       |      |
| 138. | <a href="#">HP</a> | LaserJet 4000   |       |      |
| 139. | <a href="#">HP</a> | LasetJet 4250   |       |      |
| 140. | <a href="#">HP</a> | LasetJet 4650   |       |      |
| 141. | <a href="#">HP</a> | LasetJet 5000   |       |      |
| 142. | <a href="#">HP</a> | LasetJet 5000LE |       |      |
| 143. | <a href="#">HP</a> | LasetJet 5100LE |       |      |
| 144. | <a href="#">HP</a> | LaserJet 6P     |       |      |
| 145. | <a href="#">HP</a> | Photosmart 2610 | OK    |      |
| 146. | <a href="#">HP</a> | Photosmart 7150 | OK    |      |
| 147. | <a href="#">HP</a> | PSC 1315        | OK    |      |
| 148. | <a href="#">HP</a> | PSC 1350        | OK    |      |
| 149. | <a href="#">HP</a> | PSC 1410        | OK    |      |
| 150. | <a href="#">HP</a> | PSC 1610        | OK    |      |
| 151. | <a href="#">HP</a> | PSC 2210        | OK    |      |
| 152. | <a href="#">HP</a> | PSC 2310        | OK    |      |
| 153. | <a href="#">HP</a> | OfficeJet 4255  | OK    |      |
| 154. | <a href="#">HP</a> | OfficeJet 5510  | OK    |      |

| No.  | Company        | Printer Model  | Print | Note |
|------|----------------|----------------|-------|------|
| 155. | HP             | OfficeJet 5610 | OK    |      |
| 156. | HP             | OfficeJet 6210 | OK    |      |
| 157. | HP             | OfficeJet 7210 | OK    |      |
| 158. | HP             | Infoprint 20   | OK    |      |
| 159. | IBM            | Infoprint 1412 | OK    |      |
| 160. | IBM            | Infoprint 1332 | OK    |      |
| 161. | IBM            | DI 152         | OK    |      |
| 162. | Konica Minolta | DI 250         | OK    |      |
| 163. | Konica Minolta | Pagepro 1300W  | OK    |      |
| 164. | Konica Minolta | Pagepro 1350W  | OK    |      |
| 165. | Konica Minolta | Pagepro 1380MF |       |      |
| 166. | Konica Minolta | Pagepro 9100   |       |      |
| 167. | Konica Minolta | Magicolor 2450 |       |      |
| 168. | Konica Minolta | Magicolor 5450 |       |      |
| 169. | Konica Minolta | Magicolor 7300 |       |      |
| 170. | Konica Minolta | FS-1010        |       |      |
| 171. | Kyocera        | FS-1020        |       |      |
| 172. | Kyocera        | FS-1920        |       |      |
| 173. | Kyocera        | FS-720         |       |      |
| 174. | Kyocera        | FS-820         |       |      |
| 175. | Kyocera        | FS-920         |       |      |
| 176. | Kyocera        | FS-6020        | OK    |      |
| 177. | LEXMARK        | E210           | OK    |      |
| 178. | LEXMARK        | E322           | OK    |      |
| 179. | LEXMARK        | Optra S1250    | OK    |      |
| 180. | LEXMARK        | T420           | OK    |      |
| 181. | LEXMARK        | T620           | OK    |      |
| 182. | LEXMARK        | C720           | OK    |      |
| 183. | LEXMARK        | C750           | OK    |      |
| 184. | LEXMARK        | W812           | OK    |      |
| 185. | LEXMARK        | Z43            | OK    |      |

| No.  | Company   | Printer Model    | Print | Note |
|------|-----------|------------------|-------|------|
| 186. | LEXMARK   | Z45              | OK    |      |
| 187. | LEXMARK   | Z55              | OK    |      |
| 188. | LEXMARK   | Z615             | OK    |      |
| 189. | LEXMARK   | Z705             | OK    |      |
| 190. | LEXMARK   | Z42              | OK    |      |
| 191. | LEXMARK   | Z515             | OK    |      |
| 192. | LEXMARK   | X6170            | OK    |      |
| 193. | NEC       | Pinwriter P2200  | OK    |      |
| 194. | NEC       | Pinwriter P3200  | OK    |      |
| 195. | NEC       | Pinwriter P5300  | OK    |      |
| 196. | NEC       | PINWRITER P8000C |       |      |
| 197. | OKI       | Microline 391    |       |      |
| 198. | OKI       | B4350            |       |      |
| 199. | PANASONIC | KX-P1121         |       |      |
| 200. | PANASONIC | KX-P1123         |       |      |
| 201. | PANASONIC | KX-P1124         |       |      |
| 202. | PANASONIC | KX-P1624         |       |      |
| 203. | PANASONIC | KX-P6500         |       |      |
| 204. | SAMSUNG   | ML-1520          |       |      |
| 205. | SAMSUNG   | ML-1710          |       |      |
| 206. | SAMSUNG   | ML-1750          |       |      |
| 207. | SAMSUNG   | ML-2250          | OK    |      |
| 208. | SAMSUNG   | ML-2550          | OK    |      |
| 209. | SAMSUNG   | CLP 500          | OK    |      |
| 210. | SAMSUNG   | CLP 510          | OK    |      |
| 211. | SAMSUNG   | SRP 270          | OK    |      |
| 212. | SAMSUNG   | SCX-4016         | OK    |      |
| 213. | SAMSUNG   | SCX-4100         | OK    |      |
| 214. | Sharp     | AR-255           | OK    |      |
| 215. | Sharp     | AR-265FG         | OK    |      |
| 216. | Sharp     | AR-M 160         | OK    |      |

| No.  | Company | Printer Model  | Print | Note |
|------|---------|----------------|-------|------|
| 217. | Sharp   | AR-M 205       | OK    |      |
| 218. | Sharp   | AR-M 207       | OK    |      |
| 219. | Sharp   | AR-M 235       | OK    |      |
| 220. | Sharp   | AR-M 275       | OK    |      |
| 221. | Sharp   | AR-M 350       | OK    |      |
| 222. | Sharp   | AR-M 351U      | OK    |      |
| 223. | Sharp   | AR-M 400       | OK    |      |
| 224. | Sharp   | AR-M 450       | OK    |      |
| 225. | STAR    | NX-2420        | OK    |      |
| 226. | XEROX   | Phaser 3310    | OK    |      |
| 227. | XEROX   | Able 3321      |       |      |
| 228. | XEROX   | Docuprint 240A |       |      |